

HOW TO REPLACE FLY SCREEN MESH


For this maintenance project, you will need:

- ✓ A roll of fly screen to suit the dimensions of the door or window.
- ✓ A spline roller
- ✓ A utility knife
- ✓ Scissors

1. First, locate the end of the rubber spline, this is usually found in one of the four corners.
2. Roll up and dispose of the old mesh. Make sure you keep the spline!
3. Make any desired changes to the frame (Painting, cleaning).
4. Align the top side of the mesh with the top of the frame, before using a fly screen roller to reinstall the tubing, starting at the corner.
5. Once you have made it the whole way around, you may need to cut off excess tubing.
6. Then, using a utility knife, remove the excess mesh, being careful not to cut the rubber tubing.
7. Finally, reinstall.



Be careful
when using a
utility knife!

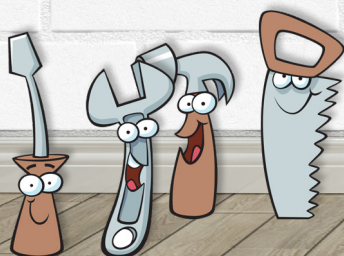

HOME IN PLACE TENANTS PLEASE REFER TO YOUR
RESIDENTIAL TENANCY AGREEMENT TO SEE IF THIS TYPE OF
MAINTENANCE IS YOUR RESPONSIBILITY.

